







# Smart Thermostat

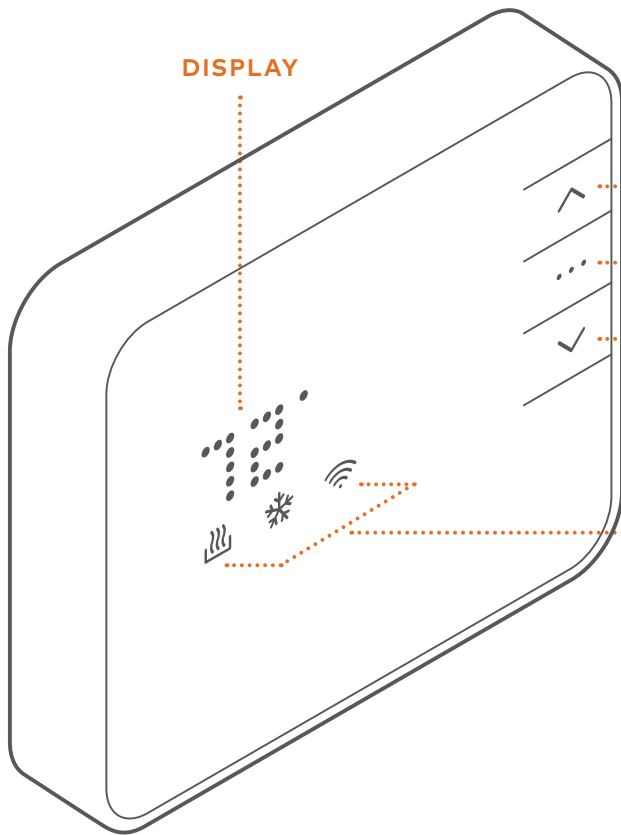


## Buttons







 
- UP**  Adjust target temperature up
- MODE**  Toggle between modes (described below)
- DOWN**  Adjust target temperature down

## Modes

- HEAT**  Activates heating system
- COOL**  Activates cooling system
- AUTO**  Brighter icon indicates which mode has currently been selected

- 
- OFF** System will not heat or cool
  - EMER** For use with heat pumps only
  - RADIO**  Illuminates only during wireless configuration

## Instructions

1. Press any button to wake the thermostat up.
2. After waking, the display will show the current mode and room temperature.
3. Press the **UP**  or **DOWN**  button once to display the current set point.  
The mode icon **HEAT**  or **COOL**  will begin to pulse.
4. Press the **UP**  or **DOWN**  button again to adjust to the desired set point.
5. Press the **MODE** button  at any time to change the mode.

### PLEASE NOTE:

After 5 seconds the display will return to the current room temperature. The mode icon will become solid to indicate this. After 5 more seconds the display will turn off to conserve energy. The thermostat will continue to operate while the display is off.